WEpaint

Step-01 — CHECK WALL

MASK AREA
WITH MASKING TAPE
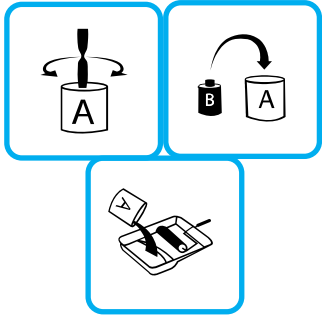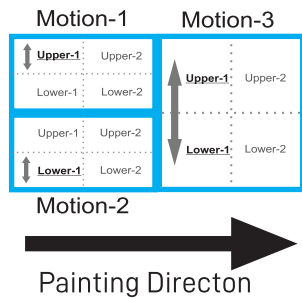
- Inspect the wall thoroughly to check smoothness and identify cracks, dampness, roughness and large dents
- Correct all the defects before applying WEpaint. Read Substrate specific surface preparation to make them WEPAINT Applicable
- Lightly Sand surface with Sanding Paper No 220/320 to make it smooth. Wipe the surface with clean cloth to remove dust and debris.
- Mask the area with Masking Tape. Check for alignment of tape.

Step-02 — ADD   MIX   POUR

- Carefully open Part A and Part B . Add Part B in to Part A
- Mix the part A + B mixture for 3-4 minute with stirring stick. The mixed paint need to consume within 1 hour.
- Carefully pour the mixed paint on covered paint Tray.

Step-03 — ROLL ON WALL

Motion-1   Motion-3
Upper-1 Upper-2   Upper-1 Upper-2
Lower-1 Lower-2   Lower-1 Lower-2
Upper-1 Upper-2
Lower-1 Lower-2
Motion-2
Painting Directon

- Always paint from left to right direction. Do Not put too much pressure on roller when applying WEpaint CLEAR to minimize drips.
- If wall is slight wavy then take care in application of WEpaint as there might be chances of Left over unpainted area, patches & bubbles due to pressure variation
- Start rolling on Upper-1(MOTION-1) in up and down motion with uniform Pressure to paint that upper section. Once Upper-1 is done, roll on to lower-1(MOTION-2) section
- If any roller marks, foam or non- painted area is found then cover it by roller with light pressure. Replace roller after every 130 sqft or 60 minute of application.

Step -04 — INSPECT

- Frequently check the surface for bubble, foam, sagging & non-painted area.. Cover it with light pressure rolling.
- WEpaint is a quick drying paint. DO NOT TOUCH WEPAINT-ED SURFACE AFTER 18-20 MINUTES.
- During this 20 minutes WEpaint-ed surface can be touched by roller, finger to remove/correct bubble, Foam, sagging or any other defects.

Step-05 — CLEAN & WAIT

WAIT
2 DAYS

- After 10-15 min of full application, carefully remove masking tape when applied paint is still wet. Collect all used painting accessories & disposed in the given plastic Bag.
- WEpaint will dry in 2-3 hour.
- Wait for 2 days and then start writing with good quality whiteboard Marker pen.